

Programming the Multi-BW

Please make sure the unit has the power connected.

See the blue dot in the picture on the end of the case.



There are magnets located inside the back cover of the remote and a reed switch in the controller that the magnet will activate if placed in the proper position.

Place the remote over the end of the case as shown in the picture below.



Hold the remote in this position for 10 seconds. The unit will emit a beep and now be in remote programming mode. Press button 1 on the TX and the unit will beep to confirm. Repeat this step for additional TX. Up to 4 TX can be learned to the unit. After all TX have been learned the unit will exit programming after 10 seconds and emit a beep to confirm it has exited.

Remotes should now be learned in.